


THERMAL


Name
THERMAL Core

Code
THKOE0C

Supply
2100W / 220 V

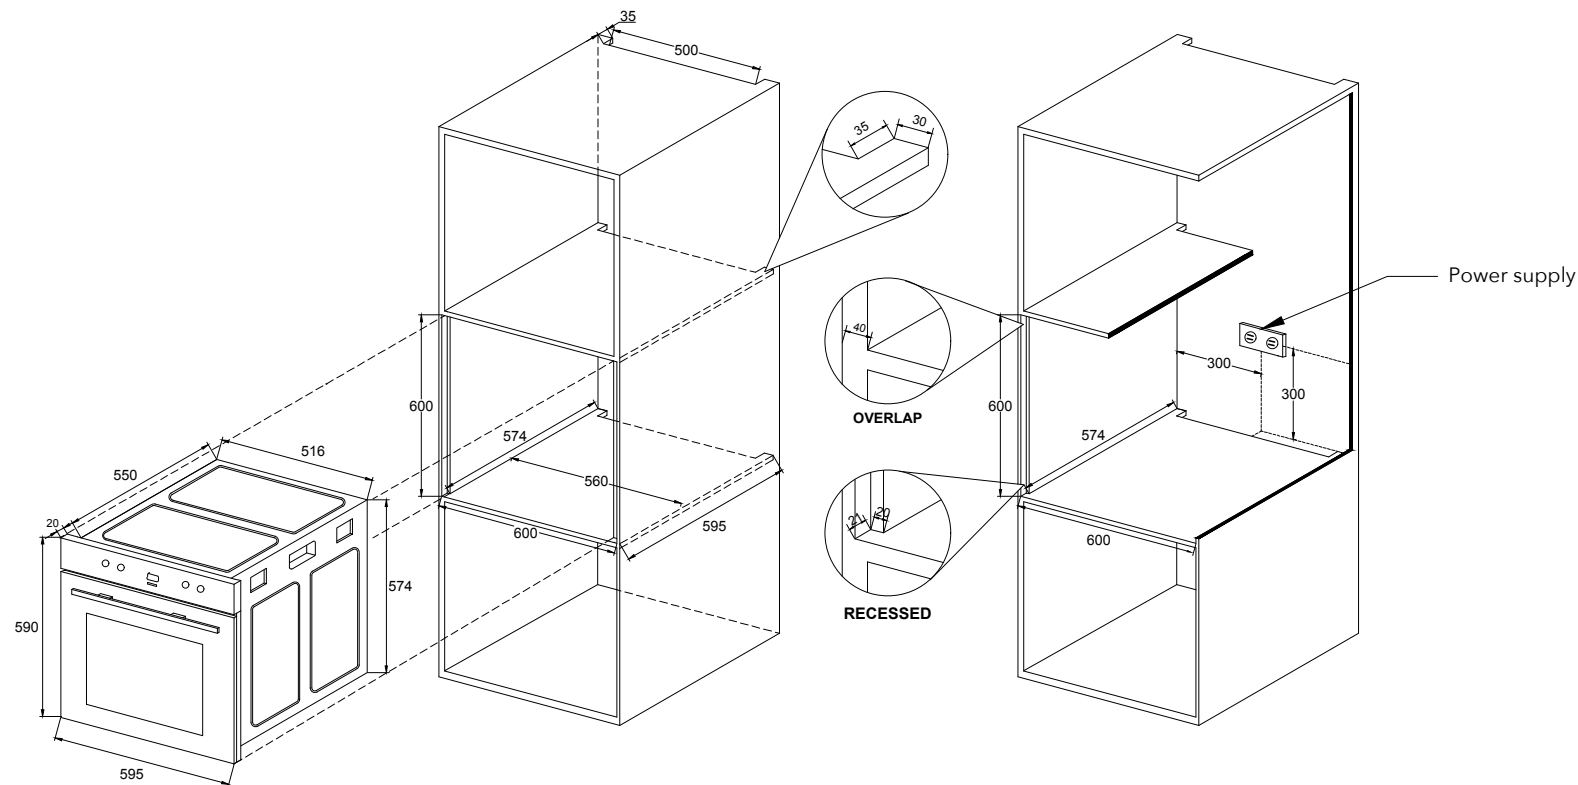

RECESSED INSTALL

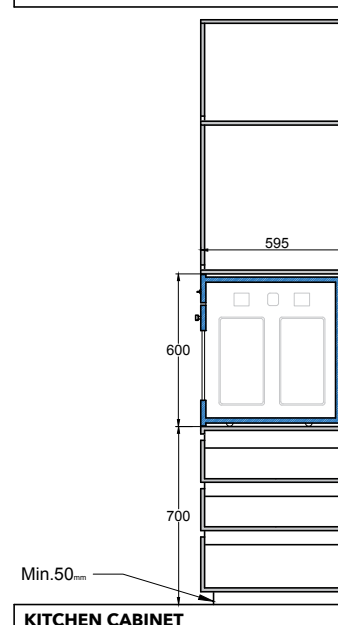

KITCHEN CABINET

INSTALLATION


The appliance should be installed built in the cabinet. It should be keep safety distance with appliance and the kitchen walls. Detail pls check below picture (values in mm).

- Surfaces, synthetic laminates and adhesives used must be heat resistant(100° C minimum), and neighboring unit fronts up to 70° C.
- Kitchen cabinets must be set level and fixed. A gap of 5 mm is required between the appliance and surrounding unit fronts.
- If there is a drawer beneath the oven, a shelf must be installed between oven and drawer.




EQUIPMENT MUST HAVE AN INDEPENDENT KEY THAT WORKS WITH THE CAPACITY OF THE EQUIPMENT.

- 01 THERMO SWITCH - MAGNETIC 2x20A
- 01 DIFFERENTIAL SWITCH

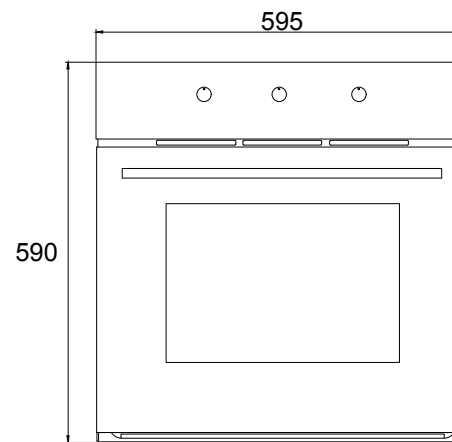

REFERENCE PICTURE

OVERLAP INSTALL

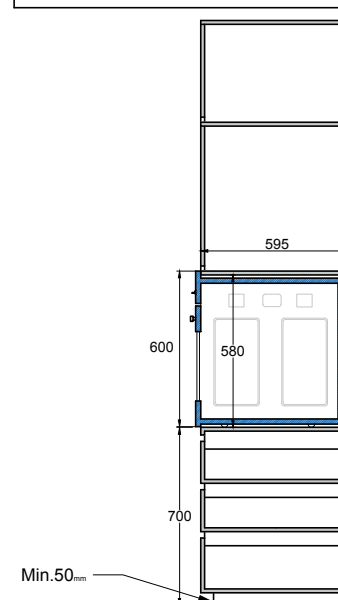

KITCHEN CABINET